



Project 16231EZ: Mailbox

A minimum of stock and a few evenings in the workshop are all that's needed to construct this sturdy mailbox. Ours is made from pine, but cedar is also a good choice, especially if it will be exposed to the weather.

To help keep rain from getting inside we've added a cove along the cleat (F) and inset the back (C) and cleat so that rain traveling down the outside of a building will run behind the mailbox. For further weather-proofing, it's important to use brass hinges, galvanized nails and a water-resistant glue such as the plastic resin type.

Mailbox Complete Schematic

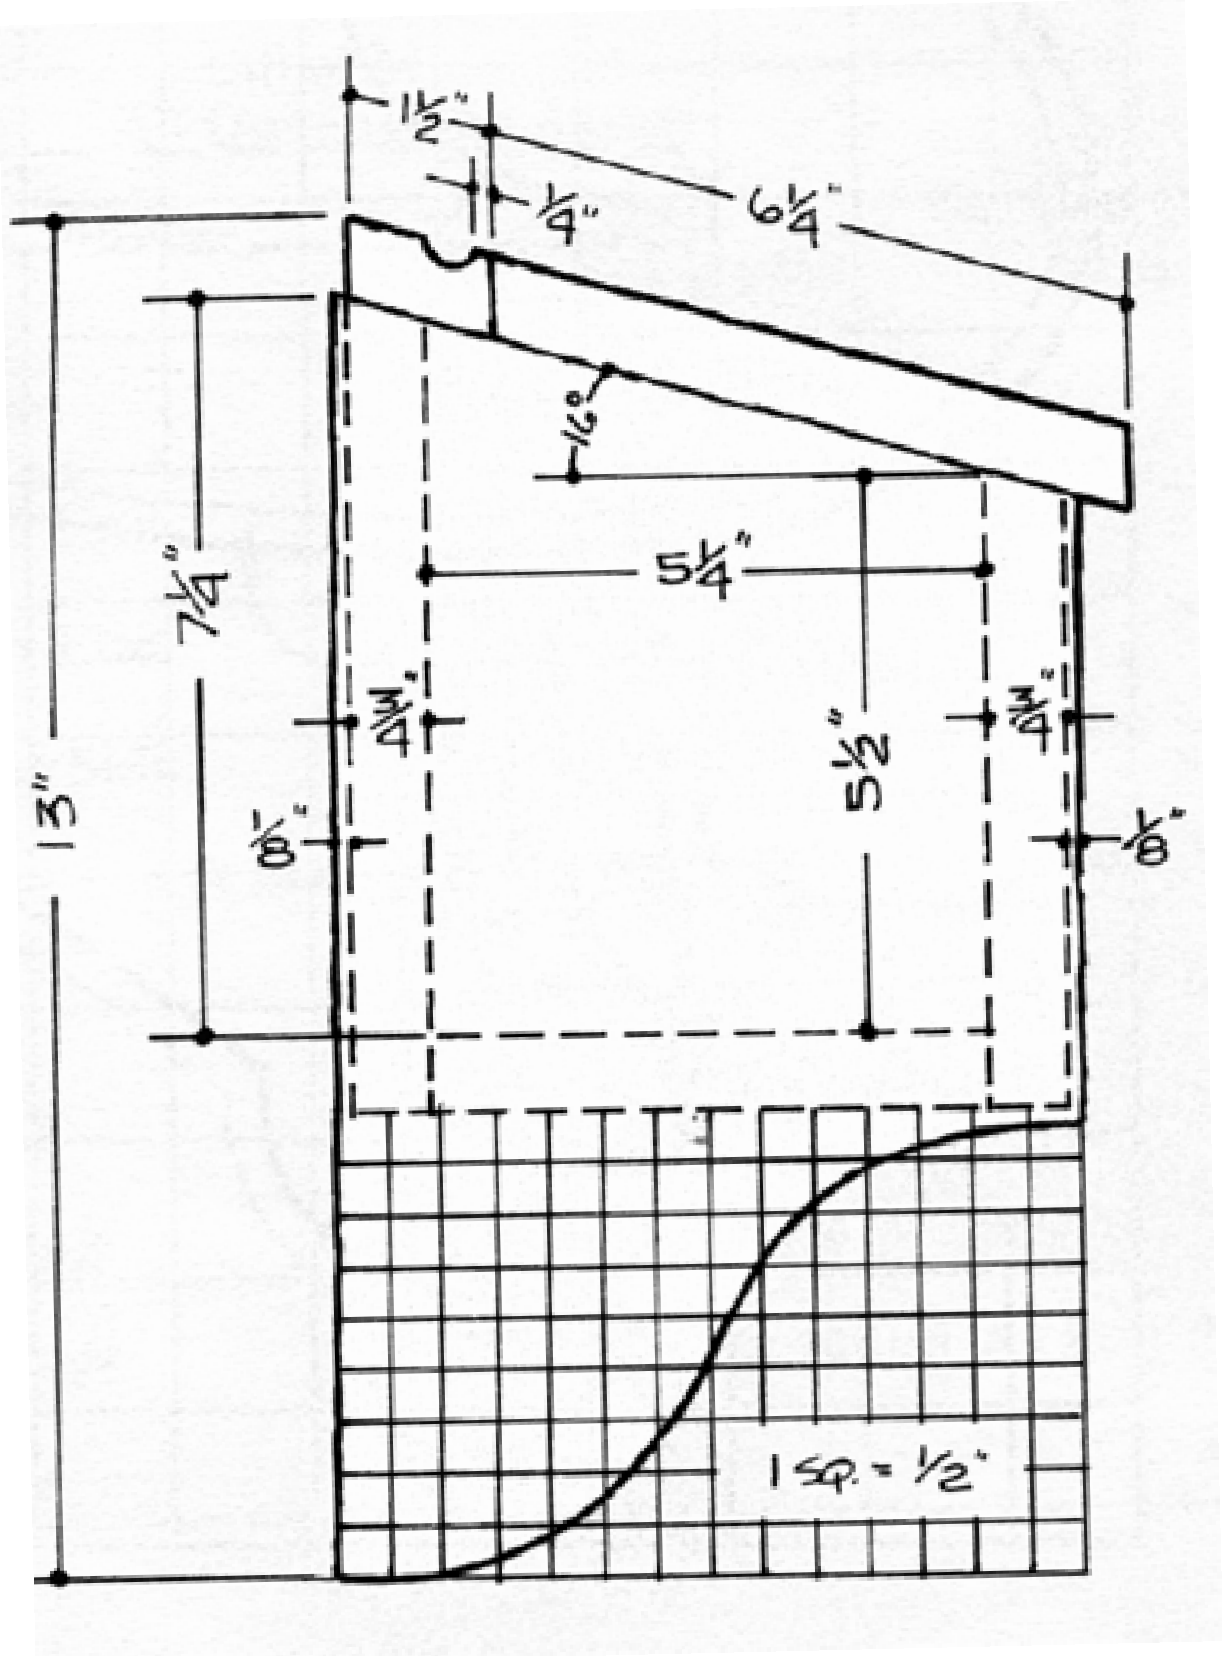

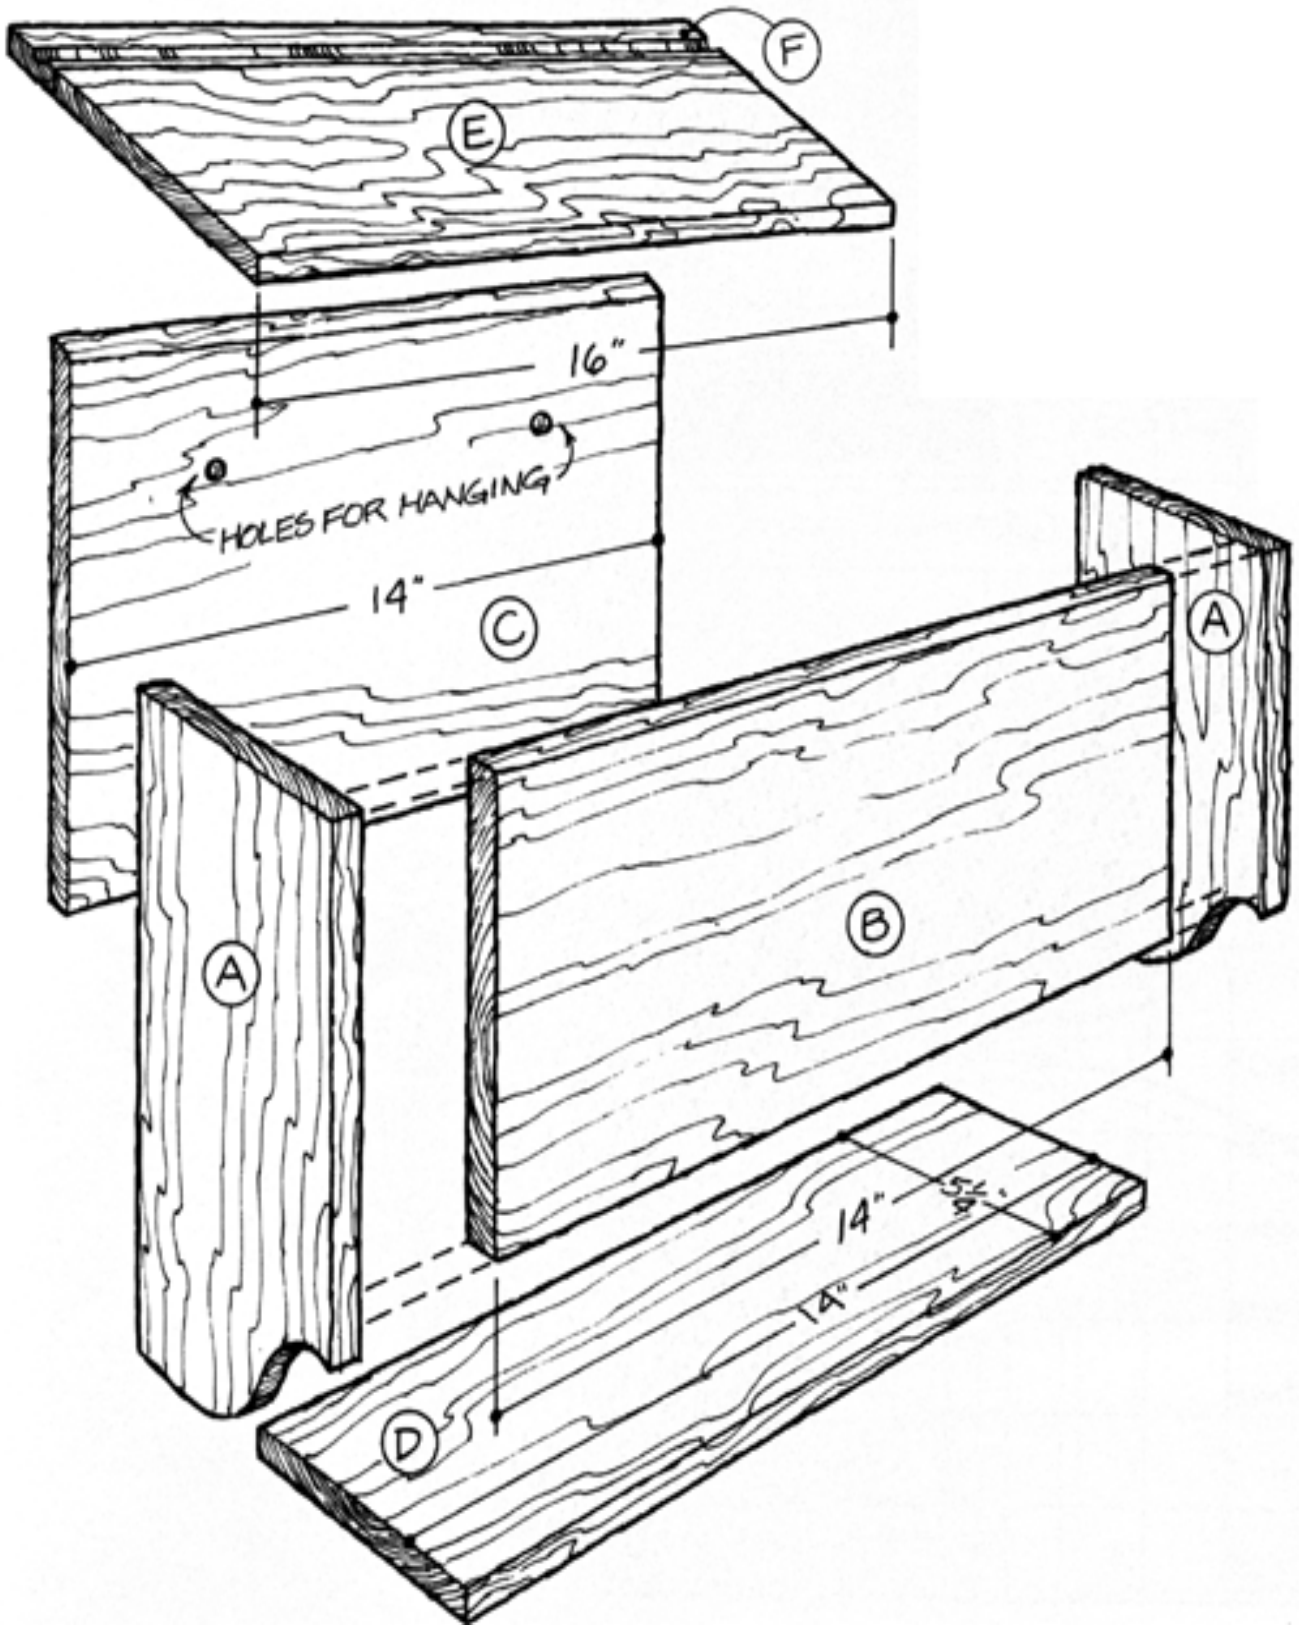

Mailbox Step-by-Step Instructions

1. Cut the two sides (A) to size (3/4" x 7" x 12-1/4").
2. Use the table or radial-arm saw to cut the tapered top edge at an angle of 16 degrees.
3. Transfer the pattern of the curve to the stock.
4. Use a band or saber saw to cut out the profile.
5. Cut the front (part B) to 3/4" x 6-1/4" x 14".
6. Cut the bottom, part D, to 3/4" x 5-1/4" x 14".
7. Edge-glue two or more narrower boards to get enough width to make part C.
8. Cut the back, part C, to 3/4" x 8" x 14".
9. Apply a 16-degree bevel to the top edge of parts B and C.
10. Start with a wide piece of stock to cut the cove in part F.
11. Clamp a guide strip to the stock.
12. Rout the cove using a 1/2" inch core box bit.
13. Set the table or radial-arm at 16 degrees.
14. Rip part F to the width shown.
15. Cut the top (E) to size.
16. Give all the parts a thorough sanding.
17. Assemble with plastic resin glue and countersunk and filled finishing nails.
18. Stain to suit.
19. Finish with three coats of polyurethane varnish.

These plans were originally published in Volume 7, Issue 2 of *The Woodworker's Journal* (Mar./Apr. 1983, page 53).